



COLUMNS: FOUR COLUMN TYPES

- COLUMNS EXHIBIT HALLS A,B,C - 33" DIAMETER (EACH)
- AIRWALL COLUMNS BETWEEN HALLS C & D - 5' x 82"
- AIRWALL COLUMNS BETWEEN HALLS D,E,F,G,H - 5' DIAMETER
- ALL OTHER COLUMNS - 3' DIAMETER

Floor Loads: 350 lbs. per sq. ft.

Clearances:
 Halls A, B & C: 27 ft. to the bottom of truss; 40 ft. to ceiling
 Halls D & E: 27 ft. to bottom of truss; 39 ft. to ceiling
 Halls F, G & H: 36 ft. to bottom of truss; 64 ft. to ceiling

Utility Boxes:

Floor utility boxes are on 30 ft. centers; all boxes have phone and electrical (110 v. on 30 amp. breakers, single phase, and 208 v. on 60 amp breakers, single phase)

FE: FIRE EXTINGUISHER
 FEC: FIRE EQUIPMENT CABINET
 FDV: FIRE DEPARTMENT VALVE
 SP: STAND PIPE
 SV: SPRINKLER VALVE
 FH: FIRE HOSE CABINET

2015 REALTORS® Conference & Expo November 13 - 16, 2015 San Diego Convention Center San Diego, CA

Floor Plan as of October 9, 2015

DISCLAIMER

Every effort has been made to ensure the accuracy of all information contained on this floorplan. However no warranties, either expressed or implied are made with respect to this floorplan. If the location of building columns, utilities or other architectural components of the facility is a consideration in the construction or usage of an exhibit, it is the sole responsibility of the exhibitor to physically inspect the facility to verify all dimensions and locations.

© Copyright 2014, Freeman. All rights reserved.

